

# Idle Control System

## Idle Speed Setting (cont'd)

9. Idle the engine for one minute with headlights (Low) ON and check the idle speed.

**Idle speed should be:**

**B18B1 engine:**

M/T	750 ± 50 rpm
A/T	750 ± 50 rpm (in Park or neutral)

**B18C1 engine: 750 ± 50 rpm**

**B18C5 engine: 800 ± 50 rpm**

10. Turn the headlights off. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

**Idle speed should be:**

**B18B1 engine:**

M/T	820 ± 50 rpm
A/T	840 ± 50 rpm (in Park or neutral)

**B18C1 engine: 850 ± 50 rpm**

**B18C5 engine: 1,050 ± 50 rpm**

NOTE: If the idle speed is not within specification, see Symptom Chart on page 11-36.