

# Wiring/Connector Location

- The ABS inspection connector (6P) is located on the cross-member under the passenger's seat.
- The service check connector (2P) is located under the dash on the passenger side of car.
- The under-dash fuse/relay box is located under the dash on the driver side of car.

