


## Electronic Components

### ABS Control Unit Replacement

1. Remove the right quarter trim panel.
2. Disconnect the ABS control unit connectors.
3. Remove the ABS control unit mounting bolts, then remove the control unit.

#### ABS CONTROL UNIT CONNECTORS

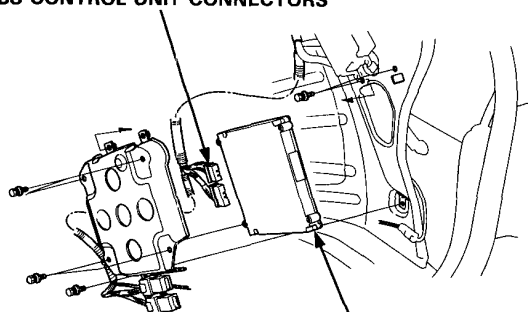



#### ABS CONTROL UNIT

4. Install the ABS control unit in the reverse order of removal.

### Relay Inspection

1. Remove the fail-safe relays and motor relay (location: page 19-41).
2. Check for continuity between the terminals C and D.  
There should be continuity.
3. Check for continuity between the terminals A and B.  
There should be continuity when the battery is connected between the terminals C and D.  
There should be no continuity when the battery is disconnected.

#### <Fail-safe Relay:>

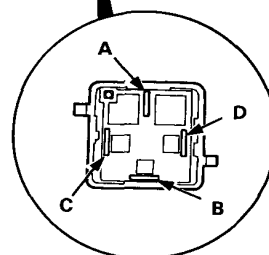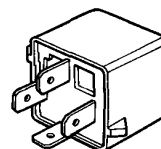

#### <Motor Relay:>

