

6. If necessary, adjust the headlights to local requirements by turning the vertical adjuster.

Do not adjust.

