


Headlight Replacement

1. Remove the front bumper (see page 20-85).
2. Disconnect the connectors (A) from the headlight (B).

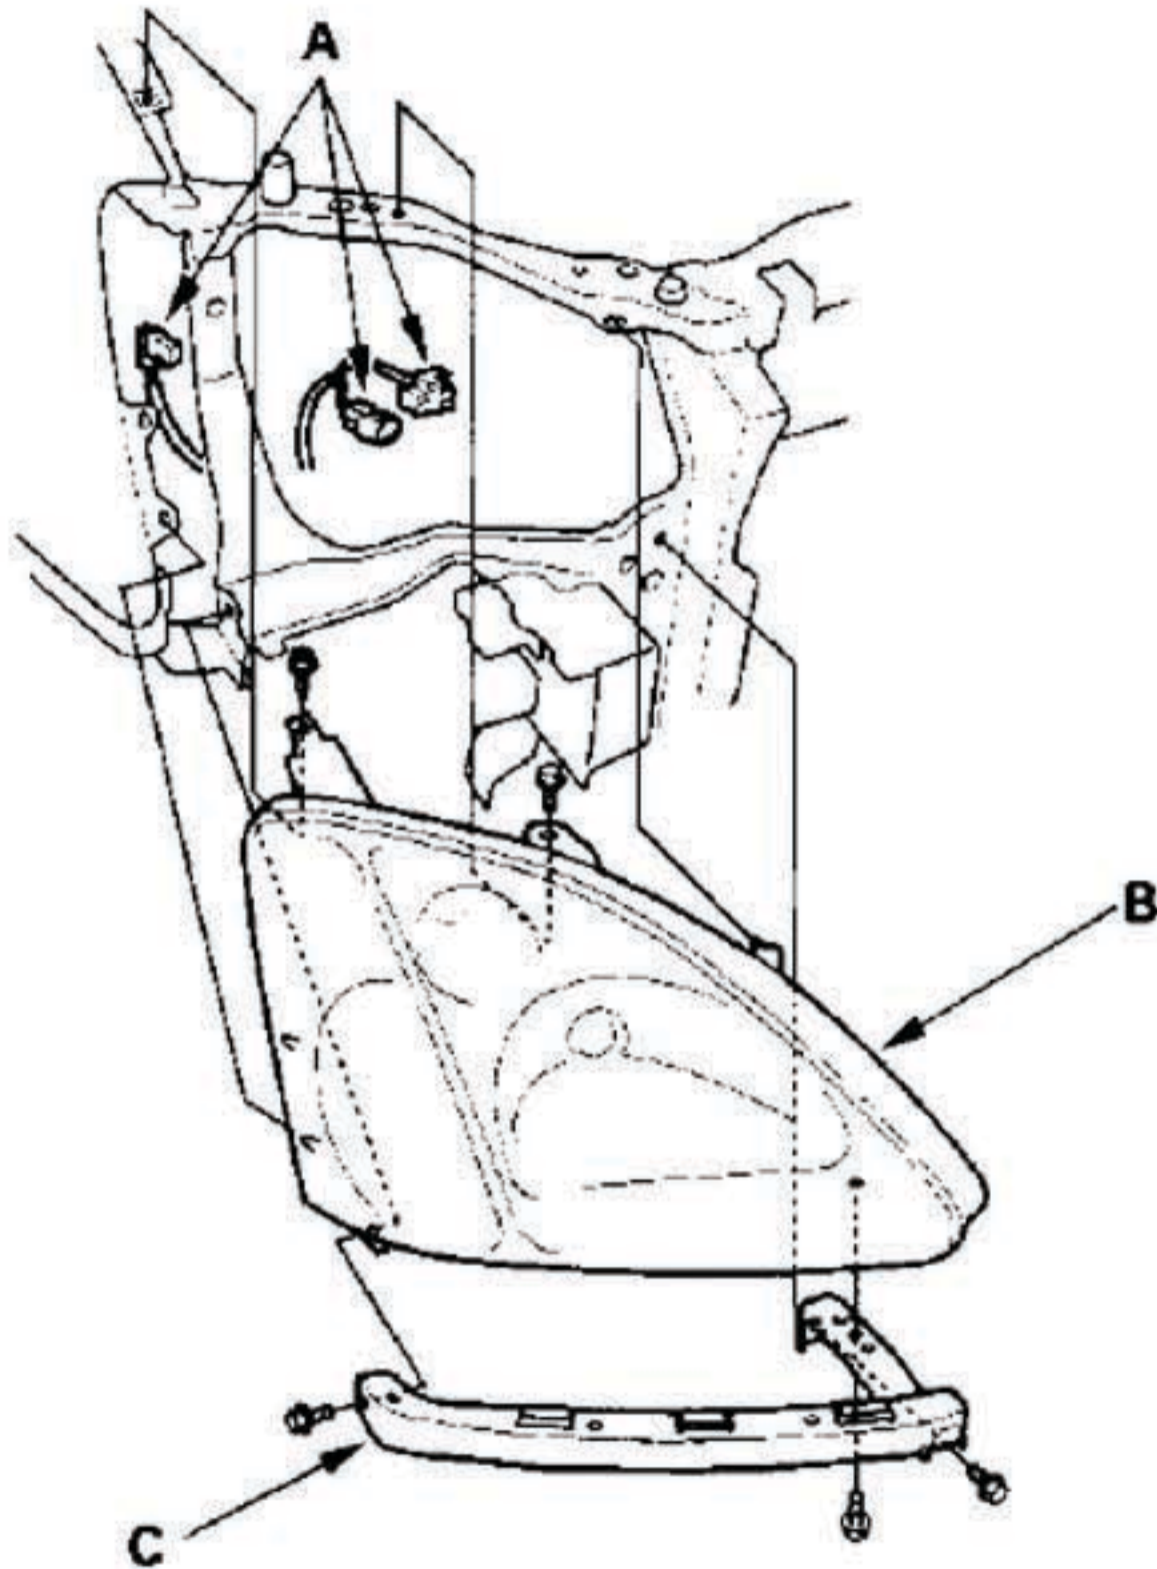

3. Remove the five mounting bolts, then remove the corner upper beam (C) and headlight assembly.
4. Install in the reverse order of removal.
5. After replacement, adjust the headlights to local