



## Transmitter Test

### NOTE:


- If the doors unlock or lock with the transmitter, but the LED on the transmitter does not come on, the LED is faulty; replace the transmitter.
- If any door or the hatch is open, you cannot lock the doors with the transmitter.
- If you unlocked the doors with the transmitter, but do not open any of the doors within 30 seconds, the doors relock automatically.
- The doors do not lock or unlock with the transmitter if the ignition key is inserted in the ignition switch.

### 1. Open the transmitter and check for water damage.

- If you find any water damage, replace the transmitter.
- If there is no water damage, go to step 3.

### 2. Replace the transmitter battery (A) with a new one, and try to lock and unlock the doors with the transmitter.

- If the doors lock and unlock, the transmitter is OK.
- If the doors don't lock and unlock, go to step 3.

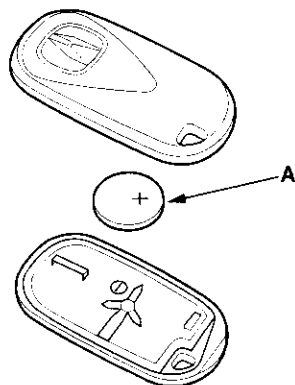

### 3. Reprogram the transmitter, then try to lock and unlock the doors.

- If the doors lock and unlock, the transmitter is OK.
- If the doors don't lock and unlock, replace the transmitter.

## Transmitter Programming

### Storing transmitter codes:

The codes of up to three transmitters can be stored in the keyless receiver unit memory. (If a fourth code is stored, the code which was input first will be erased.)

NOTE: It is important to maintain the time limits between the steps. Make sure the doors and the hatch are closed.

1. Turn the ignition switch ON (II).
2. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver under the audio unit.
3. Within 1 to 4 sec., turn the ignition switch OFF.
4. Within 1 to 4 sec., turn the ignition switch ON (II).
5. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver under the audio unit.
6. Within 1 to 4 sec., turn the ignition switch OFF.
7. Within 4 sec., turn the ignition switch ON (II).
8. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver under the audio unit.
9. Within 1 to 4 sec., turn the ignition switch OFF.
10. Within 4 sec., turn the ignition switch ON (II).
11. Within 1 to 4 sec., push the transmitter lock or unlock button with the transmitter aimed at the receiver under the audio unit.
12. Confirm you can hear the sound of the door lock actuators. Within 1 to 4 sec., push the transmitter lock or unlock button again.
13. Within 10 sec., aim the remaining transmitters (up to two additional ones) whose codes you want to store at the receiver, and press the transmitter lock or unlock buttons.  
Confirm that you can hear the sound of the door lock actuators after each transmitter code is stored.
14. Turn the ignition switch OFF, and pull out the key.
15. Confirm proper operation of the transmitters.