


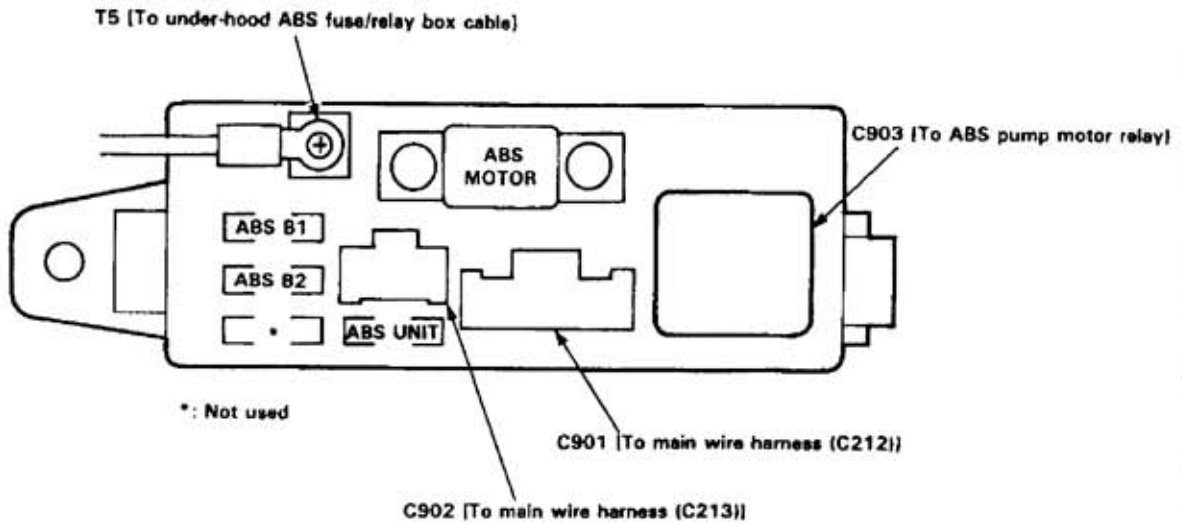

Under-hood ABS Fuse/Relay Box



Fuse Name	Amps	Wire Color	Component (s) or Circuit (s) Protected
ABS B1	20 A	WHT/GRN	Right/left ABS front solenoids
ABS B2	15 A	WHT	ABS control unit, ABS rear solenoid
ABS MOTOR	40 A	—	ABS pump motor relay, ABS unit (10 A) fuse
ABS UNIT	10 A	BRN/YEL	ABS control unit