



## Compressor Belt Adjustment

1. Loosen the idler pulley center nut and the adjusting bolt.
2. Adjust the compressor belt tension by turning the adjusting bolt.
3. Tighten the pulley center nut, then tighten the adjusting bolt securely.
  - "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
  - "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.

### NOTE:

Check for belt damage. If necessary, replace the belt.

Belt movement under a force of 100N (10 kg, 22 lb)	
New belt	Used belt
0.30~0.26 in 5.0~6.5 mm	0.32~0.40 8.0~10.0 mm

Belt tension (kg)	
New belt	Used belt
80~100	40~60

