



**If adjustment is necessary:**

1. Loosen the lower mounting bolt and adjust lock bolt.
2. Move the alternator by turning the adjusting rod to obtain the proper belt tension, then retighten the bolts.
3. Recheck the deflection of the belt.

