



Applies To: **1999 Accord** – ALL  
**2000 Accord** – See VEHICLES AFFECTED

April 2000

## Driver's Door Mirror Vibrates

### SYMPTOM

The mirror on the driver's door vibrates while driving on smooth roads.

### PROBABLE CAUSE

The mirror is not properly attached to the mirror holder, so the glass vibrates when the vehicle is in motion.

### VEHICLES AFFECTED

#### KE:

2-door: From VIN 1HGCG225.YA600001  
thru 1HGCG225.YA600998

#### KK:

2-door: From VIN 1HGCG315.YA500001  
thru 1HGCG315.YA500010

4-door: From VIN 1HGCG565.YA500001  
thru 1HGCG565.YA500429

#### KM:

4-door: From VIN 1HGCG565.YA500001  
thru 1HGCG565.YA500391

#### KX:

2-door: From VIN 1HGCG225.YA900001  
thru 1HGCG225.YA900302

### CORRECTIVE ACTION

Replace the driver's mirror.

### PARTS INFORMATION

Left Mirror: P/N 76253-S84-K21

### WARRANTY CLAIM INFORMATION

**In warranty:** The normal warranty applies.

Operation Number: 818101


Flat Rate Time: 0.3 hour

Failed Part: 76250-S82-K21ZA


Defect Code: 045

### REPAIR PROCEDURE

1. Pry out the bottom of the mirror with a screwdriver wrapped in a shop towel. Continue to pry until the actuator shafts come out of the actuator or the mirror.


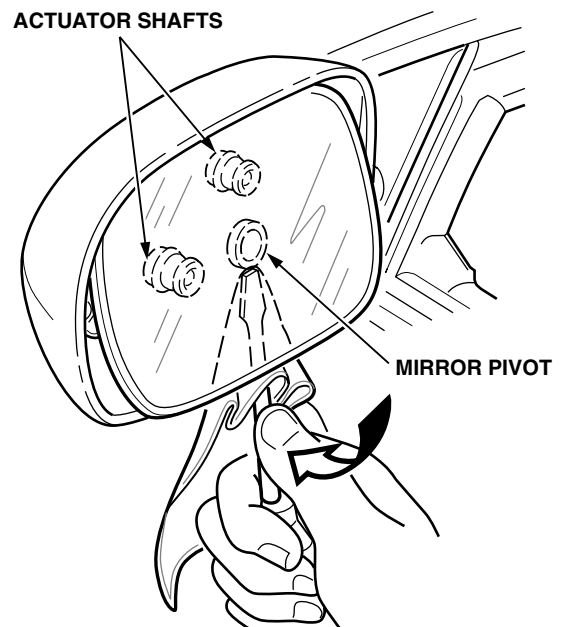


2. If the actuator shafts are still attached to the mirror, remove them and reinstall them on the actuator. Make sure the rubber boots are properly seated in the actuator.

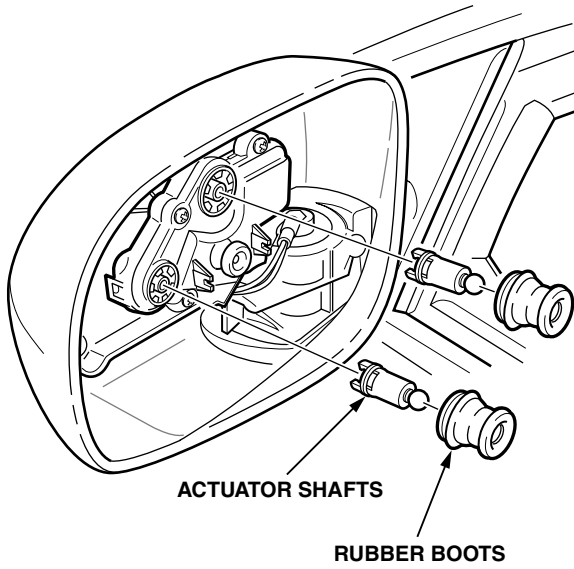

3. Before installing the new mirror, do this:

- Make sure the tabs on the actuator shafts are lined up with the slots on the back of the mirror.
- Apply grease to the mirror pivot and the actuator shafts.

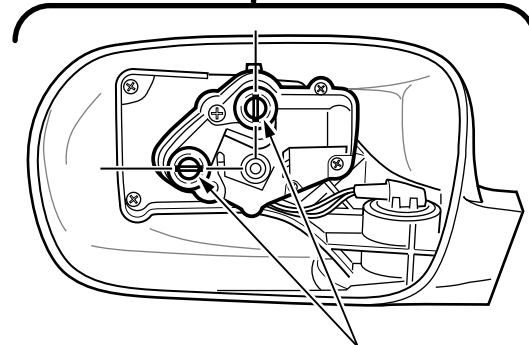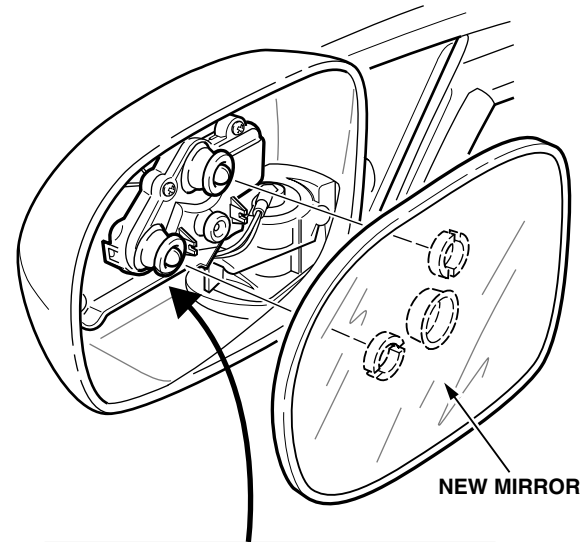

4. Align the pivot and the actuator shafts with the mirror, then carefully push on the mirror until the pivot and actuator shafts are properly seated. If the pivot and the actuator shafts will not engage, warm the shafts and the pivot with a heat gun.
5. Clean the mirror with glass cleaner.
6. Check the operation of the power mirror actuator in all four directions.
7. Test-drive the vehicle to verify that the mirror does not vibrate.



Applies To: **1999 Accord** – ALL  
**2000 Accord** – See VEHICLES AFFECTED

April 2000

## Driver's Door Mirror Vibrates

### SYMPTOM

The mirror on the driver's door vibrates while driving on smooth roads.

### PROBABLE CAUSE

The mirror is not properly attached to the mirror holder, so the glass vibrates when the vehicle is in motion.

### VEHICLES AFFECTED

#### KE:

2-door: From VIN 1HGCG225.YA600001  
thru 1HGCG225.YA600998

#### KK:

2-door: From VIN 1HGCG315.YA500001  
thru 1HGCG315.YA500010

4-door: From VIN 1HGCG565.YA500001  
thru 1HGCG565.YA500429

#### KM:

4-door: From VIN 1HGCG565.YA500001  
thru 1HGCG565.YA500391

#### KX:

2-door: From VIN 1HGCG225.YA900001  
thru 1HGCG225.YA900302

### CORRECTIVE ACTION

Replace the driver's mirror.

### PARTS INFORMATION

Left Mirror: P/N 76253-S84-K21

### WARRANTY CLAIM INFORMATION

**In warranty:** The normal warranty applies.

Operation Number: 818101


Flat Rate Time: 0.3 hour

Failed Part: 76250-S82-K21ZA


Defect Code: 045

### REPAIR PROCEDURE

1. Pry out the bottom of the mirror with a screwdriver wrapped in a shop towel. Continue to pry until the actuator shafts come out of the actuator or the mirror.


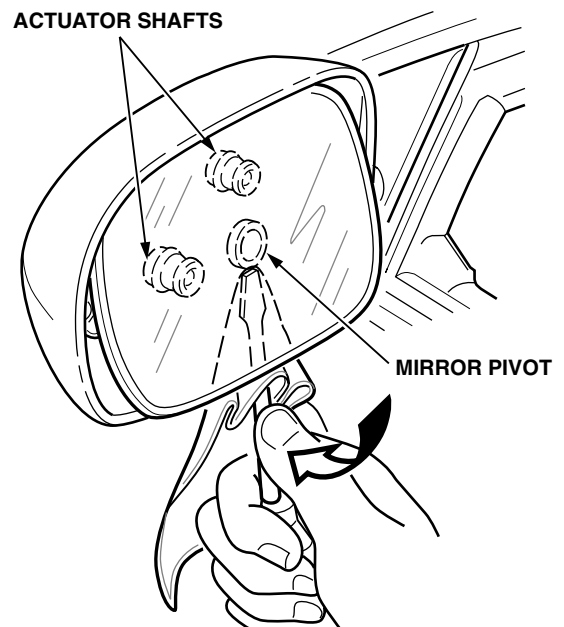


2. If the actuator shafts are still attached to the mirror, remove them and reinstall them on the actuator. Make sure the rubber boots are properly seated in the actuator.

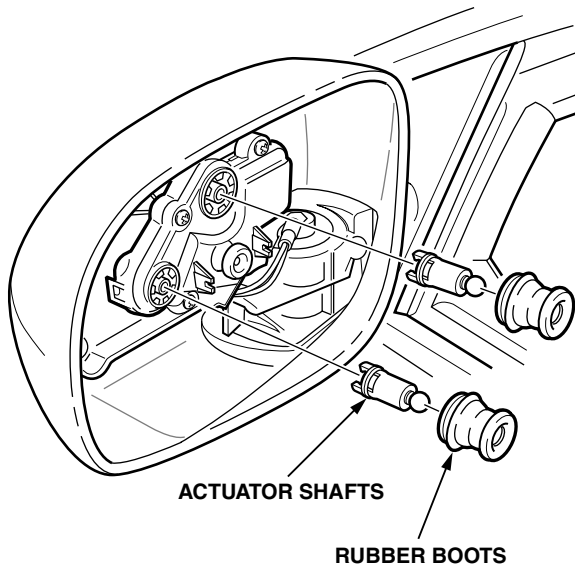

3. Before installing the new mirror, do this:

- Make sure the tabs on the actuator shafts are lined up with the slots on the back of the mirror.
- Apply grease to the mirror pivot and the actuator shafts.

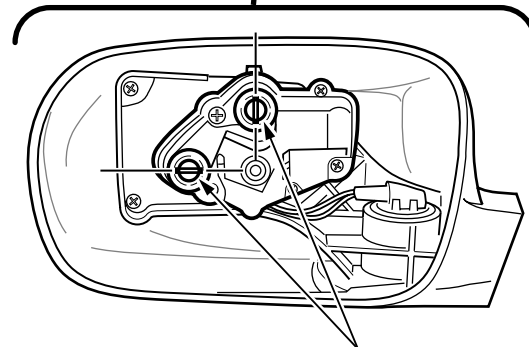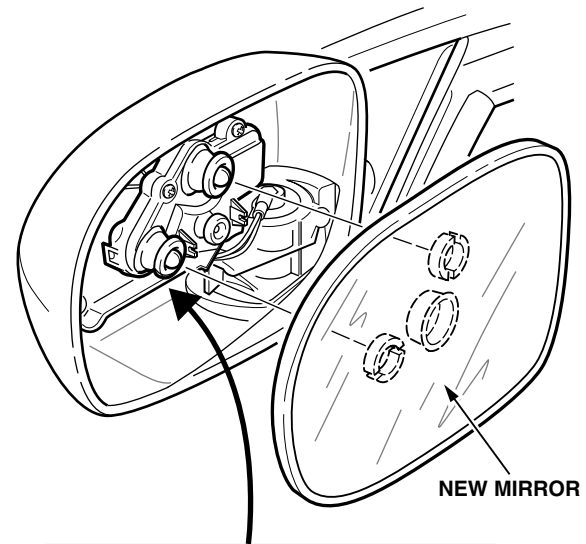

Tabs on the actuator shaft balls should be horizontal and vertical as shown.

4. Align the pivot and the actuator shafts with the mirror, then carefully push on the mirror until the pivot and actuator shafts are properly seated. If the pivot and the actuator shafts will not engage, warm the shafts and the pivot with a heat gun.
5. Clean the mirror with glass cleaner.
6. Check the operation of the power mirror actuator in all four directions.
7. Test-drive the vehicle to verify that the mirror does not vibrate.