

Model


Applicable To

File Under

Bulletin No.

1998-00
ACCORD

ALL
except EX V6

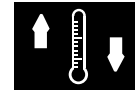

99-088

Issue Date
December 1999

Loose or Broken Temperature and Fan Control Knobs

SYMPTOM

The temperature or fan control knob feels loose.

PROBABLE CAUSE

Residual grease from the switches can deteriorate the plastic of the control knobs, causing the control knobs to crack or break.

CORRECTIVE ACTION

Clean the switch shafts with denatured alcohol or other non-petroleum-based cleaner, and install the new control knobs.

PARTS INFORMATION

Temperature and Fan Knob Set: P/N 79581-S84-999

WARRANTY CLAIM INFORMATION


The normal warranty applies.

Flat rate time: 0.2 hour
Failed part: P/N 79581-S84-A01
Defect code: 018

REPAIR PROCEDURE

1. Remove the old or broken temperature and fan control knobs with a pair of pliers.

NOTICE To avoid damaging the center panel, do not pry off the knobs.

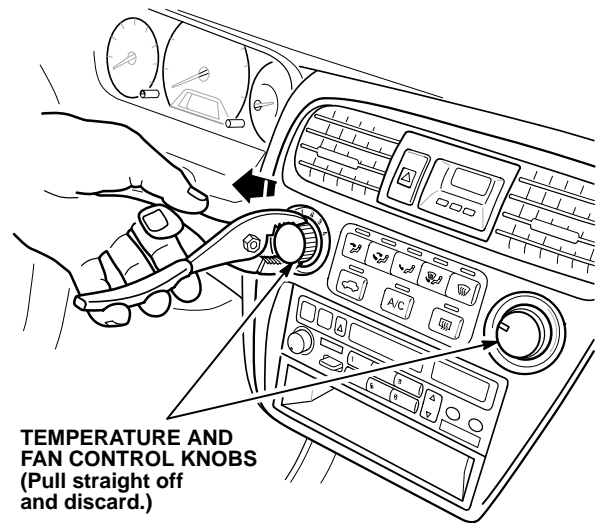

2. Clean both switch shafts with denatured alcohol; make sure you remove all grease from the shafts.
3. Install the new control knobs.