



Applies To: **1996-99 Civic – ALL**  
**2000 Civic – See VEHICLES AFFECTED**

**February 2002**

## Driver's Power Mirror Vibrates

(Supersedes 99-002, *Driver's Power Mirror Vibrates (Non-Breakaway Type Door Mirror)*, dated September 2000)

### SYMPTOM

The power mirror on the driver's side vibrates at vehicle speeds above 65 kph.

### PROBABLE CAUSE

The mirror is loose in its holder.

### CORRECTIVE ACTION

Replace the mirror holder.

### PARTS INFORMATION

Power Mirror Holder: P/N 76253-S01-A15

### REQUIRED MATERIALS

Silicone Grease: P/N 08798-9013

### WARRANTY CLAIM INFORMATION

**In warranty:** The normal warranty applies.

Operation Number: 818101

Flat Rate Time: 0.3 hour

Failed Part: P/N 76253-S01-A15

Defect Code: 045

### VEHICLES AFFECTED

#### 2000 Civic 2-door:

KC: From VIN 1HGEJ....YL000001 thru 1HGEJ....YL808762

KE: From VIN 1HGEJ6...YL600001 thru 1HGEJ6...YL601591

KG: From VIN 1HGEJ6...YL600001 thru 1HGEJ6...YA601863

KK: From VIN 1HGEJ8...YL500001 thru 1HGEJ8...YL500055

KX: From VIN 1HGEM1...YL900001 thru 1HGEM1...YL901201

KY: From VIN 1HGEJ7...YL700001 thru 1HGEJ7...YL700078

KZ: From VIN 1HGEJ6...YL600001 thru 1HGEJ6...YL601793

#### 2000 Civic 4-door:

KA: From VIN 1HGEJ....YL000001 thru 1HGEJ....YL051088

From VIN 2HGEJ....YH500001 thru 2HGEJ....YH561084

KK: From VIN 1HGEJ6...YL500001 thru 1HGEJ6...YL500578


KX: From VIN 1HGEJ8...YL900001 thru 1HGEJ8...YL903842

## REPAIR PROCEDURE


1. Wrap a flat-tip screwdriver in a shop towel to prevent damage to the mirror housing and the mirror holder; then, with the screwdriver tip as close to the pivot as possible, carefully pry the mirror holder from the pivot.



2. Remove and save the dust boots and screw studs from the mirror holder. Discard the mirror holder.

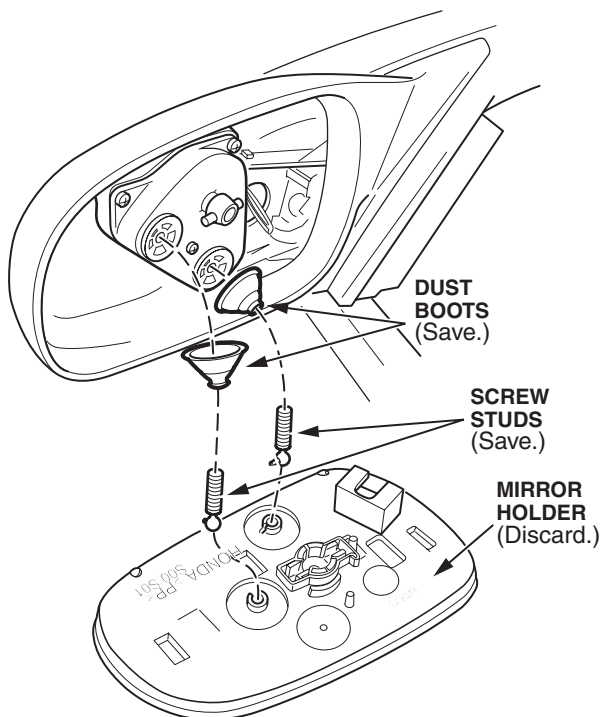


3. Before you install the new mirror holder, apply silicone grease to the ball ends on the screw studs, and to the three sockets in the mirror holder. Snap the ball ends into the small sockets, then slip the dust boots over the screw studs.

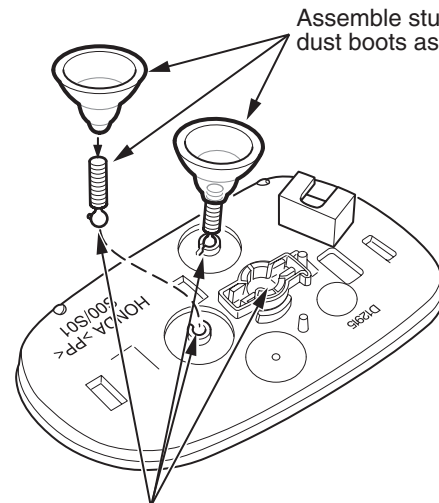


Apply silicone grease to these areas.

4. While holding the mirror holder up to the mirror housing, press the dust boots into place on the actuator housing cover. Make sure the boots stay on the screw studs.

Press the dust boots into place on the actuator housing cover as the mirror holder is installed.

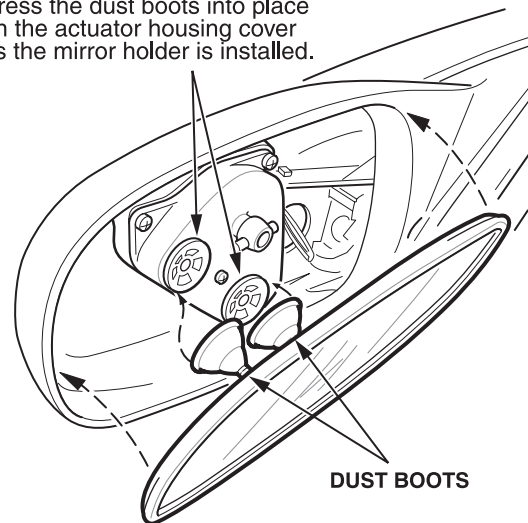

5. Press the screw studs into the actuator gear retaining clips, then press the mirror holder onto the pivot.

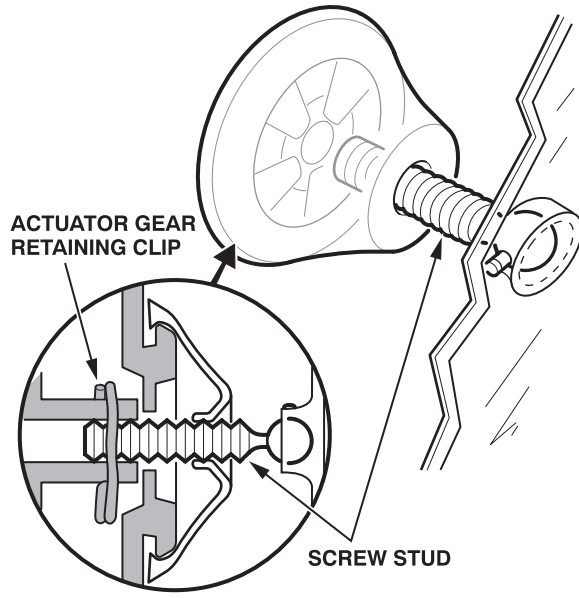

6. Test the mirror for a full range of movement.
7. Test-drive the vehicle to make sure the mirror does not vibrate.