Flow Chart: Compressor

Compressor does not come on.

Inspect No. 18 and No. 38 fuses.

Are the fuses OK?

NO → **Replace the fuses.**

YES

Disconnect the 4-P connector from the compressor clutch relay.

Measure voltage between the WHT terminal (+) and body ground.

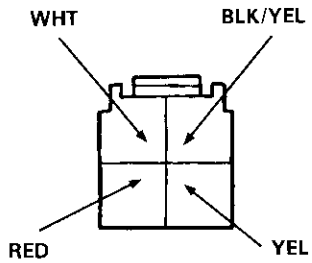

CLUTCH RELAY SOCKET
View from wire side

Turn the ignition switch on.

Is there battery voltage?

NO → **Repair open in WHT wire between the fuse box and compressor clutch relay.**

YES

Measure voltage between the BLK/YEL terminal (+) and body ground.

Is there battery voltage?

NO → **Repair open in BLK/YEL wire between the fuse box and compressor clutch relay.**

YES

Connect the jumper wire between the WHT terminal and RED terminal.

Does the compressor clutch engage?

NO → Turn the ignition OFF and reconnect the 4-P connector to the compressor clutch relay.

YES

(To page 22-8)

(To page 22-7)