Flow Chart: Compressor (cont'd)

(From page 22-6)

Disconnect the RED terminal and turn the ignition switch on.

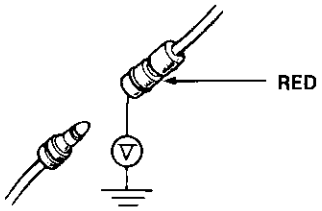

Measure voltage between the RED terminal (+) and body ground.

Is there battery voltage?

NO → **Repair open in RED wire between the compressor clutch relay and compressor clutch connector.**

YES

Turn the ignition switch OFF and check the thermal protector (page 22-31, 36)

Is the thermal protector OK?

NO → **Replace the thermal protector.**

YES

Replace the compressor clutch.